



Size Matters

Camcorder Fitting List for
JIMMY BO 200



	DIGITAL CAMCORDER BRAND	MODEL	L	H	D
1	Aiptek	A-HD 200	120	73	34
2	Aiptek	Pocket DV	102	61	46
3	Aiptek	Pocket DV II	84	69	41
4	Aiptek	IS-DV2	86	72	36
5	Aiptek	IS-DV3	86	72	36
6	Aiptek	PCM13	90	33	31
7	Aiptek	DV-T100	86	72	36
8	Aiptek	DV-3100	84	79	41
9	Aiptek	DV-3100 2mp	84	79	41
10	Aiptek	DV-4100	84	79	41
11	Aiptek	DV-5100	84	79	41
12	Aiptek	DV-4500 4mp	98	65	33
13	Aiptek	DV-5300	97	46	43
14	Aiptek	DV-5800	104	66	32
15	Aiptek	DV-5900	98	65	33
16	Aiptek	MZ-DV-MPEG4	113	70	33
17	Aiptek	MPVR 8mp	104	66	38
18	Canon	HF 10	129	64	73
19	Canon	HF 100	129	64	73
20	Canon	HG10	129	81	75
21	Canon	HV 30	138	82	88
22	Canon	MD 150	119	92	57
23	Canon	MD 216	127	82	68
24	Canon	MD 235	127	82	68
25	Canon	MV 900	115	92	49
26	Canon	DVD - DC10	122	86	48
27	Canon	DVD - DC20	122	86	48
28	Canon	DVD - DC40	126	87	60
29	Canon	DVD - DC50	130	90	62
30	Canon	DVD - DC100	123	86	51



Size Matters

Camcorder Fitting List for
JIMMY BO 200



	DIGITAL CAMCORDER BRAND	MODEL	L	H	D
31	Canon	DVD - DC210	128	88	54
32	Canon	DVD - DC220	128	90	54
33	Canon	Elura 60	132	79	74
34	Canon	Elura 65	132	79	74
35	Canon	Elura 70	132	79	74
36	Canon	Elura 80	132	79	71
37	Canon	Elura 90	132	79	71
38	Canon	Elura 100	109	76	56
39	Canon	Optura 30	134	82	77
40	Canon	Optura 40	134	82	77
41	Canon	Optura 50	132	81	71
42	Canon	Optura 60	132	81	71
43	DXG	DXG-505	90	71	38
44	DXG	DXG-506	90	71	38
45	DXG	DXG-589	109	71	33
46	Genius	G-shot DV610	112	71	36
47	Genius	G-shot DV611	100	70	30
48	Genius	G-shot DV1110	109	69	30
49	Genius	G-shot DV1210	95	71	35
50	Hitachi	DZ - GX3100	121	86	48
51	Hitachi	DZ - GX3200	132	89	48
52	Hitachi	DZ - GX5100	125	87	61
53	Hitachi	DZ - HS300	135	90	61
54	Hitachi	DZ - HS301	125	87	59
55	Hitachi	DZ - HS501	125	87	66
56	Hitachi	DZ - MV350	134	89	57
57	Hitachi	DZ - MV730	133	89	51
58	Hitachi	DZ - MV750	133	89	51
59	Hitachi	DZ - MV780	123	86	51
60	Isonic	Snapbox AV80	102	51	21



Size Matters

Camcorder Fitting List for
JIMMY BO 200



	DIGITAL CAMCORDER BRAND	MODEL	L	H	D
61	Isonic	Snapbox AV565	95	71	34
62	Isonic	Snapbox AV566	99	50	36
63	Isonic	Snapbox M1	120	51	27
64	JVC	GZ - MC 500	118	55	80
65	JVC	GZ - MG130	110	71	66
66	JVC	GZ - MG155	110	71	66
67	JVC	GZ - MG175	110	71	66
68	JVC	GZ - MG255	110	71	66
69	JVC	GZ - MG275	110	71	66
70	JVC	GZ - MG555	118	74	72
71	JVC	GZ - MG575	118	74	72
72	JVC	GR - DA30US	117	77	71
73	JVC	GR DA 20	117	77	71
74	JVC	GR D 725	114	94	61
75	JVC	GR D 818	118	74	67
76	Mustek	DV5300	99	76	41
77	Mustek	DV9300	99	76	41
78	Panasonic	PV-GS150	122	74	71
79	Panasonic	SDR-S7	102	59	41
80	Panasonic	HDC - SD 5	135	67	65
81	Panasonic	VDR - D160	129	87	53
82	Panasonic	SDR - H20	121	83	76
83	Panasonic	SDR - H21	121	73	70
84	Panasonic	SDR - H40	116	70	67
85	Panasonic	SDR - H250	121	83	76
86	Panasonic	SDR - H280	121	73	70
87	Panasonic	SDR - S10	114	63	31
88	Panasonic	SDR - S150	100	81	50
89	Panasonic	NV GS 17	114	81	63
90	Panasonic	NV GS 27	120	69	86



Size Matters

Camcorder Fitting List for
JIMMY BO 200



	DIGITAL CAMCORDER BRAND	MODEL	L	H	D
91	Panasonic	NV - GS60	120	82	69
92	Panasonic	NV GS 90	119	85	67
93	Panasonic	NV GS 180	123	73	71
94	Panasonic	NV GS 230	123	73	71
95	Panasonic	NV GS 300	135	73	76
96	Panasonic	NV GS 330	136	73	79
97	RCA	EZ101	102	59	33
98	RCA	EZ201	114	64	26
99	Sanyo	VPC - HD1	119	80	36
100	Sanyo	VPC - HD2	119	79	36
101	Sanyo	VPC - HD700	109	74	35
102	Sanyo	VPC - HD100	113	90	55
103	Sanyo	VPC - E1	112	71	41
104	SamSung	VP - D165wb	122	88	55
105	SamSung	VP-D 381	112	95	61
106	SamSung	VP-D 451	102	74	53
107	SamSung	VP - D461B	102	75	54
108	SamSung	VP - D463B	102	75	54
109	SamSung	VP - DX10	121	89	54
110	SamSung	VP - DC161wb	122	88	55
111	SamSung	VP - DC163	122	88	55
112	SamSung	VP - DC171w	122	88	55
113	SamSung	VP - DC175wb	121	84	54
114	SamSung	VP - DC563	122	84	55
115	SamSung	VP - DC575wb	121	87	54
116	SamSung	VP - MX10	121	63	60
117	SamSung	VP - HMX10	118	68	62
118	SamSung	VP - X220L	94	61	31
119	SamSung	VL - SD20	97	74	41
120	SONY	HDR SR 8	144	81	75



Size Matters

Camcorder Fitting List for
JIMMY BO 200



	DIGITAL CAMCORDER BRAND	MODEL	L	H	D
121	SONY	HDR SR 11	138	76	83
122	SONY	HDR - CX7	131	69	67
123	SONY	DCR - SR35E	113	77	76
124	SONY	DCR - SR42A	115	73	71
125	SONY	DCR - SR62	115	73	72
126	SONY	DCR - SR82	115	73	72
127	SONY	DCR - SR82C	115	73	72
128	SONY	DCR - SR300	128	78	76
129	SONY	DCR - SR300C	128	78	76
130	SONY	DCR HC 27	113	79	65
131	SONY	DCR - HC28	113	79	75
132	SONY	DCR - HC38	115	85	63
133	SONY	DCR HC 45	114	85	63
134	SONY	DCR - HC48	115	85	63
135	SONY	DCR HC 51 E	114	85	63
136	SONY	DCR HC 62	115	85	63
137	SONY	DCR - DVD108	131	89	55
138	SONY	DCR DVD 110 E	130	89	55
139	SONY	DCR - DVD308	131	89	55
140	SONY	DCR DVD 410 E	89	55	55
141	Toshiba	GSC - R30	135	79	78
142	Toshiba	GSC - R60	119	71	51
143	Toshiba	Camileo Pro HD	113	70	33
144	Toshiba	A100F	119	71	51

Note: For Jimmy Bo 300, 400, 500, 600 and 700 please see the separate camera fitting list.